



Truma VarioHeat

CP plus Functions Quick Reference



ADJUST ROOM TEMPERATURE

Range: 40-86°F (5-30°C)



Once the temperature setting has been entered, a flame icon will appear on the status line above the RV symbol.



Next, a propane bottle icon will appear showing that the unit is calling for heat.



SET CLOCK TO CURRENT TIME



SET TIME SWITCH

Set a start time and end time for room temperature, energy mode, and fan speed set points.



SETTINGS

Index - Show version number of connected device

Bright - Adjust backlighting

Lang - Adjust language

12-24h - 12/24 hour mode

Temp - °F or °C


Offset - Calibrate temp offset

Reset - Factory reset



SELECT FAN SPEED

OFF - Fan is switched off.
Can be selected only if no appliance is running.

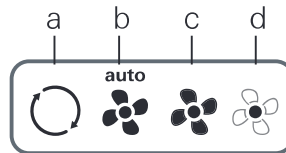

- Vent** - Circulating air, if no appliance is running 10 increment speeds.
- Auto** - Set temperature reached using the most efficient fan speed.
- Boost** - Fast room heating.
- Night** - Ultra-quiet fan operating.
Heater runs only on part load.

Find more
resources here



"Simply Better"
truma.com/us

