

CAMPER JACK DIRECTIONS


CJ31 - CJ41

CJ31 - 1500 lbs. max. capacity per set. Recommended for campers weighing 1000 lbs. or less.


CJ41 - 3000 lbs. max. capacity per set. Recommended for campers weighing 2200 lbs. or less.

Rental or commercial use voids warranty or liability - CXHD's are recommended for this application.

1. Select a level site to unload camper. Loading or unloading in high winds or on rough ground is not advisable.
2. Remove Brophy Camper Jacks from boxes: two (2) poles, two(2) lift assemblies with winches, two(2) winch handles and two(2) bases.
3. **CJ41 only:** pull swivel leg out on the base to make a tripod.
4. Position the lift assembly so that the safety catch lever on the winch is in the upward position.
5. Insert one reinforced pole into the open end of the lift assembly.
6. Put the pole with the lift assembly on it into the center hole of the base.
7. Fasten a handle to the winch. A wrench should be used for tightening as the nut is self-locking and fits tightly on the threads.
8. Push down on the safety catch lever and loosen the cable by unwinding the winch.
9. When enough slack is obtained in the cable, pick up the lift assembly by the cable and place the cable over the pulley at the top of the pole.
10. Assemble both jacks placing one on each side of the camper at the point of balance. This is usually close to the axle of the pickup.
11. Place the base so that the short leg is straight outward from the camper.
12. The pulley should be positioned sideways. That is, the axis should be at right angles to the camper, and the groove should be parallel.
13. Place the lifting pads under the lower edge of the camper making sure that they are well seated by taking up slack in the cables.
14. Lift each side about six inches. If camper does not balance, lower and reposition jacks on both sides to the point of balance. Once found, the point of balance may be marked on the side of the camper if desired.
15. Lift camper evenly with both jacks. If one person is lifting alone, lift each side about ten inches alternately.
16. Oil all points of friction periodically.

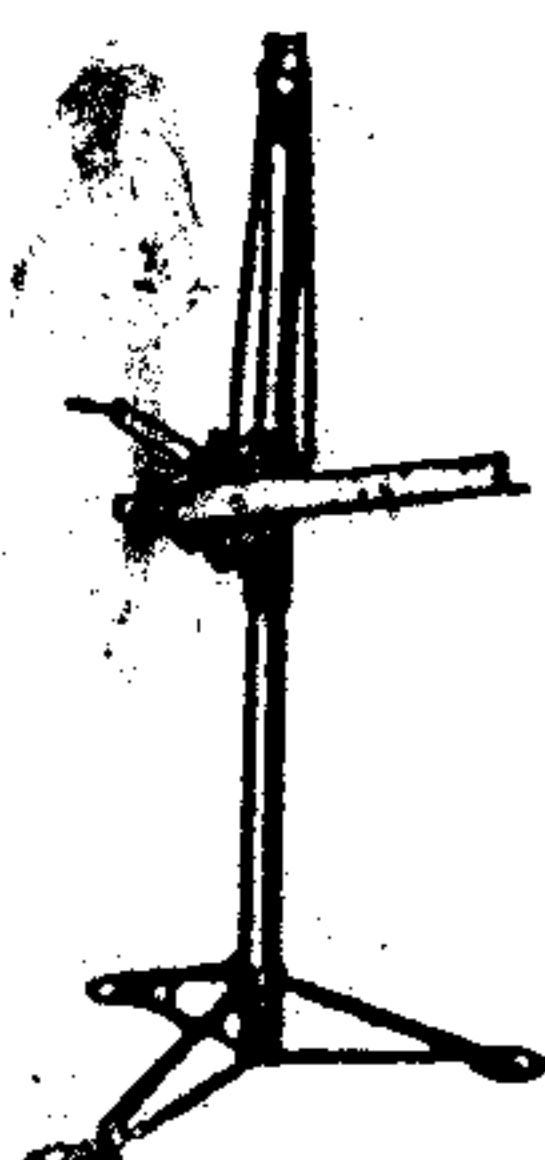

CJ31

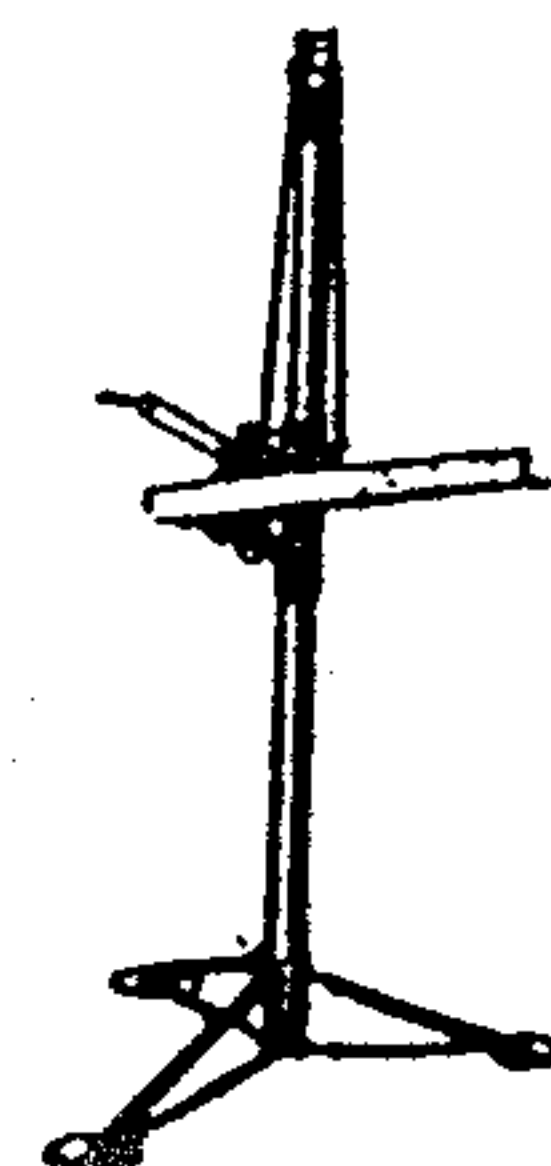

CJ41